

Paper Tray Assembly

1



The dispensation of the medication will be carried out in the separately provided **Sealing Tray**.

2



Carry out the sealing in the **Sealing Tray** as usual.

3



Never seal it in paper trays!

4




Prepare the OneClick Lock-System together with the acrylic glas insert.

5



Place the empty paper tray on the acrylic glas insert.

6

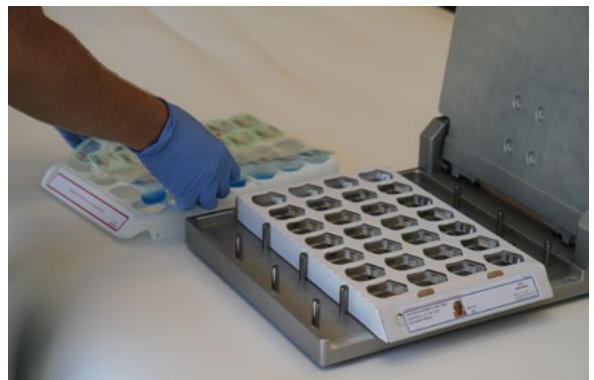

Insert the sealed rows of cups as one unit from the sealing tray into the empty paper tray.

Paper Tray Assembly

7



Insert the sealed rows of cups loosely into the empty paper tray.

8



Use the lock-system to snap the cups into the paper tray. Sometimes a „click“ noise can occur when the cup is firmly pressed in.

9



When the rows of cups are firmly seated in the tray, the paper tray is ready for delivery.

10



The sealing tray is reused for the next seal.

If you have any questions, please do not hesitate to contact us.